

D3 + D5 + D6 + D7

D-series Mounting

V1.0



EN

Mounting accessories

Klick Fast stud

The D-Series camera is supplied with a screw-in Klick Fast stud attached.


Also supplied is a small tool to assist attachment and removal of the Klick Fast stud.



Klick Fast mount



Attachment/Removal tool

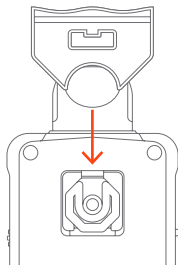

Remove Klick Fast using tool

Stud Removal with tool


First remove the fixing screw, then use the tool to remove the stud, placing the tool above the Klick Fast and pushing downwards to release the stud.



NOTE: If the Klick Fast stud is not required do not reinsert the screw after stud removal.

Stud re-attachment with tool

Simply align the tool with the Klick Fast stud and the groove on rear of the camera and push upward to click stud into place. Then fix into place with the screw.

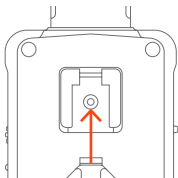

Slide into groove and click to place




Attach Klick Fast using tool

Mounting accessories

Klick Fast stud attach & removal without tool

The Klick Fast stud may also be attached by pushing the clip into place without using the tool.


However, the removal of the Klick Fast stud without the tool requires a flat head screwdriver in order to lever up the clip tongue, before gently sliding the stud downwards.

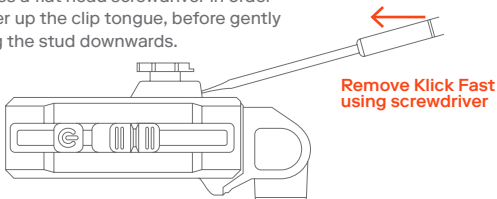

Shirt clip attachment

The D-Series camera is supplied with a shirt clip in the box.

To attach the shirt clip, simply align the attachment to the rear groove on the D-Series and slide and clip, as per diagrams in the right.

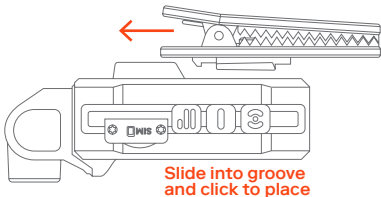


Shirt clip removal

To remove the shirt clip, first rotate the clip 90 degrees, then use a flat head screwdriver to lever up the clip tongue before gently sliding the clip downwards.

Mounting with Klick Fast

Attachment to Klick Fast mount



With the camera in an upright position, insert the Klick Fast stud into the slot of the Klick Fast Mount and push down until the camera clicks into position.

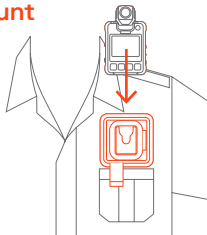

Removal from Klick Fast mount

To remove the camera, rotate 180° clockwise or anticlockwise until the camera is upside down.

Then, pull upwards to remove the camera.


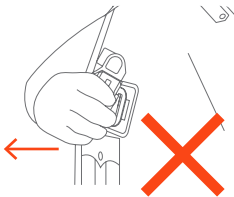
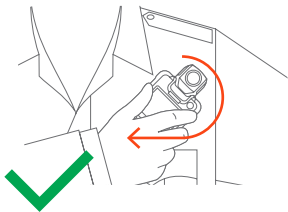


Do not attempt to remove the camera from the Klick Fast mount without rotating first. Failure to rotate the camera will cause damage to the camera or mount.

Mounting with shirt clip & lanyard



Shirt clip

The shirt clip can be rotated in increments of 90 degrees allowing attachment to a pocket, belt, shirt etc.

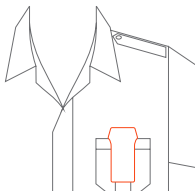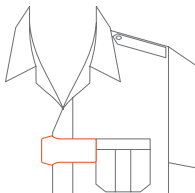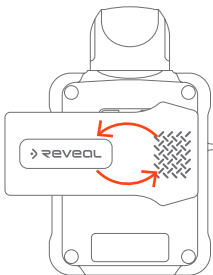

Shirt clip with lanyard


The shirt clip has two holes on at the top allowing it to be used with the lanyard (also supplied in the box) allowing the camera to be worn around the neck.

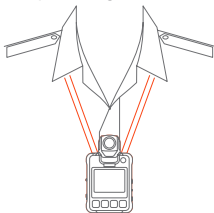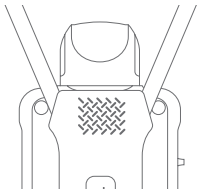

Optional mounting accessories


Klick Fast mount - magnetic

RVL-MT152

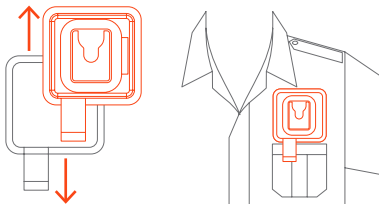


Klick Fast mount - helmet (adhesive)

RVL-MT146

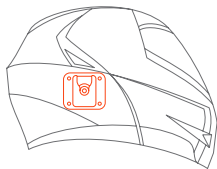

Klick Fast Picatinny rail mount


RVL-MA401/2

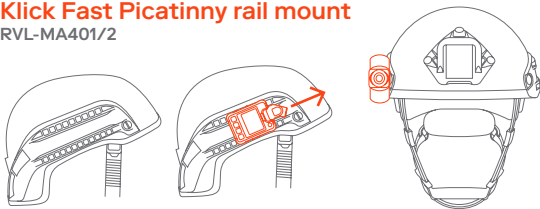

Optional mounting accessories


Klick Fast epaulette mount

RVL-MT120

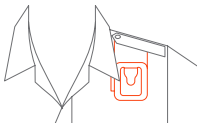


Klick Fast shoulder mount

RVL-MT122

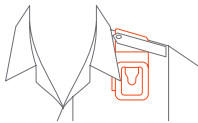

Klick Fast shoulder harness

RVL-MT110

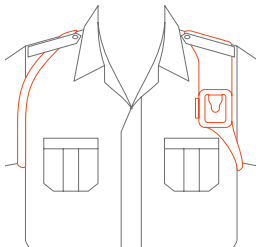

Klick Fast chest harness

RVL-MT130

