

K6 + K7

K-series Operation

V1.0




EN

Basic functions







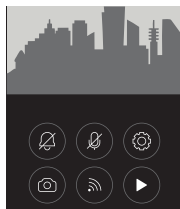

Basic functions

1
2



3
4
5

Button Functionality

Buttons	Screen	Function
1 ↓	n/a	Start Recording
1 ↑	n/a	End Recording
2	n/a	Power On/Off
2	n/a	Standby On/Off, Exit Menu
3		Playback Mode
3	n/a	Activate Touchscreen
4		Stealth Mode On/Off
4 4		Audio Mute On/Off
5		Connection Mode
5	n/a	Streaming Start/Stop
n/a		Photo
n/a		Settings (read only)



Click




Double Click



Hold for 2s

Recording

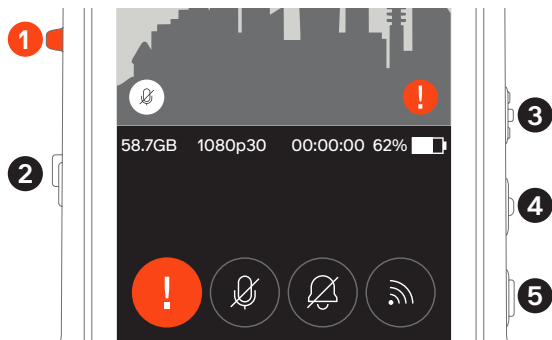

Button Functionality


Buttons	Screen	Function
1 ↓	n/a	Start Recording
1 ↑	n/a	End Recording
2	! !	Mark/unmark as Important
3	n/a	Activate Touchscreen
4	🔇	Stealth Mode On/Off
4 4	🔇	Audio Mute On/Off
5	📶	Connection Mode
5	n/a	Streaming Start/Stop

● Click

●● Double Click

▬ Hold for 2s


Recording

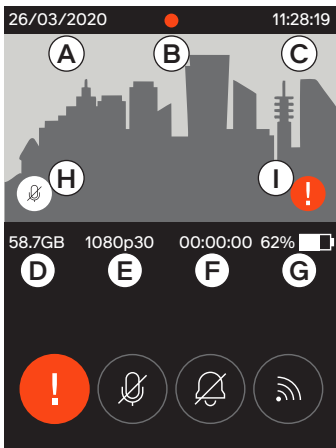

Screen Data

A	Current date
B	Recording indicator (red)
C	Current time
D	Remaining storage
E	Recording resolution
F	Elapsed recording time
G	Battery charge
H	Audio mute indicator
I	Important indicator


Playback

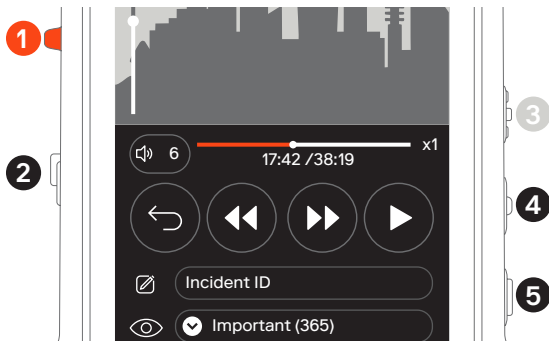

Button Functionality

Buttons	Screen	Function
1 ↓	n/a	Start Recording
2		Exit playback
n/a		Rewind
n/a		Fast Forward
n/a		Play/Pause
4		Volume Up
5		Volume Down
n/a		Cloak/Uncloak

Playback

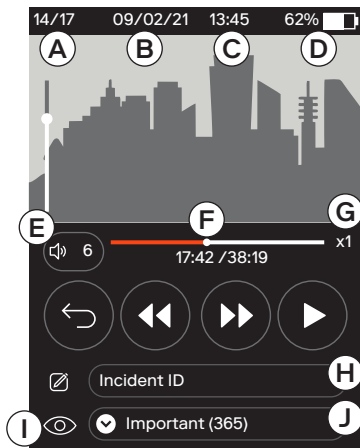


Screen Data


A	File number / File total
B	Date of recording
C	Time of recording
D	Battery charge
E	Volume level: 0 - 10
F	Playback / Total time
G	Playback speed: x1 x4 x16 x64
H	Incident ID & Notes field
I	Cloaked indicator
J	Retention policy dropdown

SIM Card Insertion (K7 only)

- 1) Remove the two fixing screws from the SIM card cover using the tool provided.
- 2) Insert the SIM card as per the illustration.
- 3) Fix the SIM card cover back in place. Ensuring the screws are tightened to maintain waterproofing.

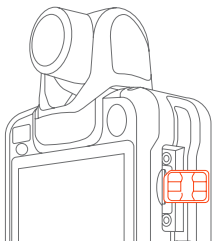


Camera head articulation

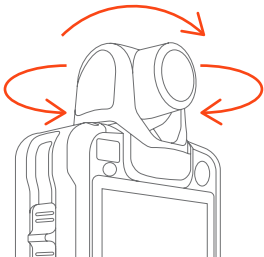


The K-Series camera head is able to rotate 308° horizontally and 177° vertically allowing the camera to be worn in various places on people of all shapes and sizes, or head mounted on a helmet or cap.

DO NOT OVER ROTATE!

The K-Series camera head does not rotate 360° and attempting to do so will cause damage.

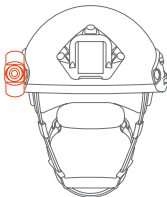

Camera head Locking

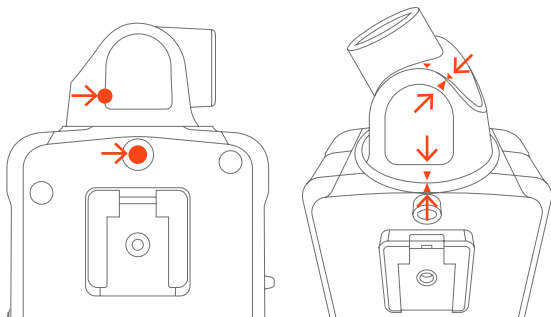


It is possible to lock the K-Series camera head into 1 of 4 vertical and 1 of 3 horizontal positions.

This procedure requires K-Series camera head locking screws, available from your Reveal contact.

- 1) Remove the two rubber bungs to expose the screw holes.
- 2) Adjust the camera head into the desired position, using the arrow marks to align the screw holes.
- 3) Insert the screws and tighten

There is no need to re-insert the rubber bungs.

Notifications

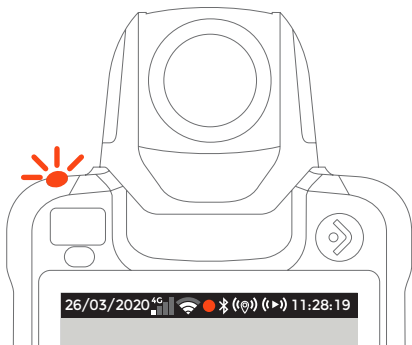

LED light

Operation
Powered on
10s Standby
Recording
Pre-Recording
10s Trigger Mode
Connecting*
Connected*
Recording & Connected*
Charging
Charging
Fully charged
DEMS 360
Uploading
Deleting files
Not booked out & Charging
Not booked out & Charged
Booked out & Charging
Booked out & Charged
Updating Firmware

Connectivity

	No SIM Card*
	SIM Card, LTE inactive*
	Signal Strength and band*
	Wi-Fi Signal Strength
	Bluetooth trigger mode
	Video Streaming Enabled, but not active
	Video Streaming Active
	GPS enabled but no fix + Sat Count
	GPS enabled with fix + Sat Count
	GPS Streaming Enabled, but no fix
	GPS Streaming Active with fix

*K7 only

Battery Safety and Storage

Battery safety

Reveal's body cameras use lithium ion batteries which are common in most portable devices such as radios and mobile phones. Reveal's cameras are safety tested with the appropriate certification.

Damage to a lithium ion battery can cause excessive heat build-up often associated by an audible "hissing" sound, smoke and, in extreme cases, combustion. The K-Series casing provides a significant degree of battery protection, however, if the case becomes punctured or crushed by excessive forces, then there is a risk of battery damage. Therefore, we recommend that the user of cameras performs a risk assessment as to the role of the wearer and likelihood of excessive trauma to the camera.

If a camera becomes excessively hot or emits any unusual sounds or smoke then:

- Immediately detach the camera and place in a safe area.
- Do not charge the camera.
- Contact Reveal Support.

Storage

Store in dry place, away from direct sunlight and sources of heat, at a temperature between -20°C and 50°C (-4°F to 122°F).

Lithium ion battery discharge naturally over extended periods of time and if not charged for prolonged periods of time, may deteriorate resulting in reduced performance and failure.

If your K-Series camera is kept in long-term storage it should be charged to at least 50% of full charge every six months. Your warranty may be invalidated if you fail to recharge your battery regularly or to follow other instructions for the storage, installation, commissioning, use or maintenance of the camera.